




Application: 2009-2014 Polaris RZR 800 2 and 4 Seat Blow Hole Instructions

KIT CONTENTS:

- 1 - MTNTK Blow Hole w/ Silicone Adaptor
- 1 - Clamp

Your exact application may not be shown but the location is very similar on all RZR's listed.

1. Remove the engine access panel located behind the seats, exposing the clutch housing.
2. Loosen clamp and remove exhaust hose from the clutch housing.
3. Place wiring harness into exhaust hose and route it so it comes out the other end (may need to use some sort of wire to help route it through).

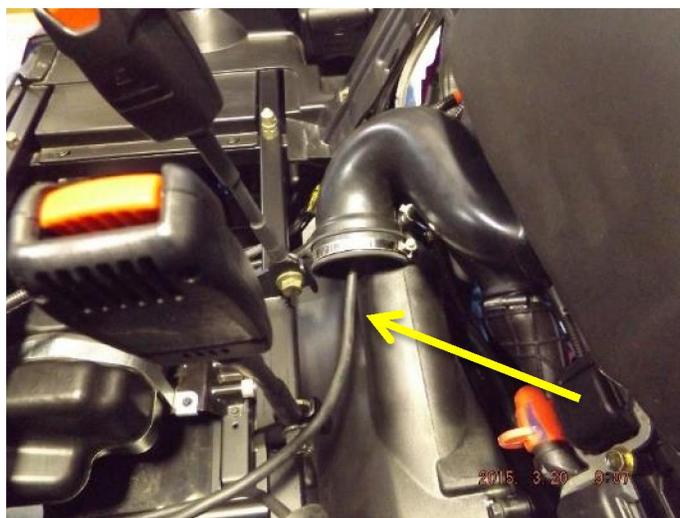

4. Pull excess wire out of the exhaust hose to allow for easy install of blow hole.




5. Route wiring harness to the driver side of the RZR so you can plug into the tail light harness. Ensure wiring is routed over the support bars to prevent any heating or damage to the wiring.



6. Insert metal end of the blow hole into the exhaust hose (use of a lubricant may be needed to ensure ease of installation). Tighten clamp to secure blow hole to exhaust hose.



7. Connect silicone end of blow hole to the clutch housing and tighten clamp. Ensure the clamps are as shown to prevent the engine access panel from pushing the clamps into the hose.

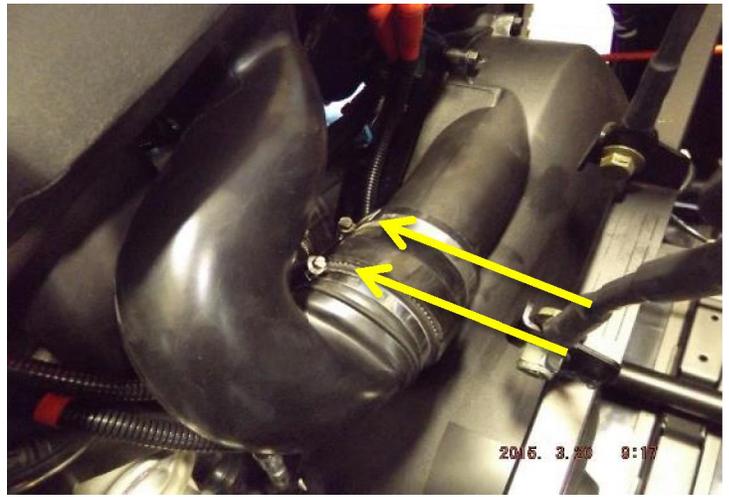

8. Disconnect tail light connection and re-connect wiring harness to proper ends of tail light connectors.



9. Secure wiring to ensure no damage occurs while the RZR is in use. This will also prevent any part of the wiring harness from being exposed to engine components.



ATTENTION: *We recommend you have a qualified service technician remove your clutch cover and inspect clutches/belt for any pre-existing problems. The Blow Hole cannot solve all belt/clutch heating problems, especially when a pre-existing condition due to worn or faulty parts is present. It is only used to aid in cooling clutches and belt.*

For more information about installation, questions, or comments, please call MTNTK Performance at: 208-652-0122 OR EMAIL US AT ORDERS@MTNTKPERFORMANCE.COM