

FEEL THE HEAT!

Rear Receiver Hitch for CanAm Maverick Xds Models

Part # **16-2200** 2015 Maverick All Xds and Max Xds Models Black

Part # **16-2201** 2015 Maverick All Xds and Max Xds Models Manta Green

Congratulations on your purchase of the DragonFire Rear Receiver Hitch for the CanAm Maverick Xds Models. The Maverick lineup was never intended for utility use, but with a motor like the 1000 Rotax, the possibilities are endless. Some Maverick owners like the option of adding a rear receiver hitch for towing and DragonFire has the solution. A simple bolt-on and go product, this receiver will not only provide the ability to run a hitch, it acts as a gusset strengthening the rear frame. Be sure to check out the full line of DragonFire Accessories for your CanAm vehicle at your local authorized dealer or online at <http://www.DragonFireRacing.com>

Only fits Xds and Xds Turbo Models



- Read and understand these instructions before installing product
- Do NOT exceed 500 lbs. of tongue weight
- Use only with standard 2" hitch
- Do not use product if there are any signs of damage

Tools Required

Floor Jack & Jack Stands

Ratchet with 15mm Socket

15mm Wrench

Disclaimer

Off road activities can be hazardous and could lead to injury, dismemberment, paralysis and death. No warranty of representation is made as to the products ability to protect the user from any injury or death. The user assumes that risk. The acceptance and /or use of this merchandise purchased from DragonFire by the customer hereby shall release DragonFire from any and all liability pertaining to the use of such merchandise.

Step 1: Place vehicle on a flat and level surface. Place gear selector in "Park" and remove keys from the ignition.

Step 2: Use floor jack to lift rear of vehicle off the ground and support with jack stands.

Step 3: Remove the 4 factory bolts from the rear suspension components. Set hardware aside, it will be reused. (Figure A)


Step 4: Place receiver hitch into position by aligning the holes on the a-arm tabs. Secure using factory hardware removed in **Step 3**. (Figure B)

Step 5: Torque hardware to specifications in factory service manual.


Step 6: This completes installation. Time to ride and enjoy!

ProTip: Periodically check all hardware and re-tighten if needed.

For further assistance, please contact your authorized DragonFire dealer.

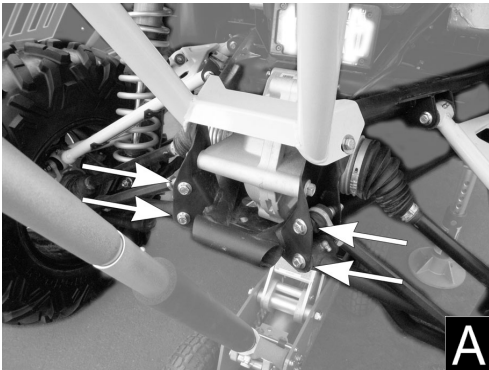

A

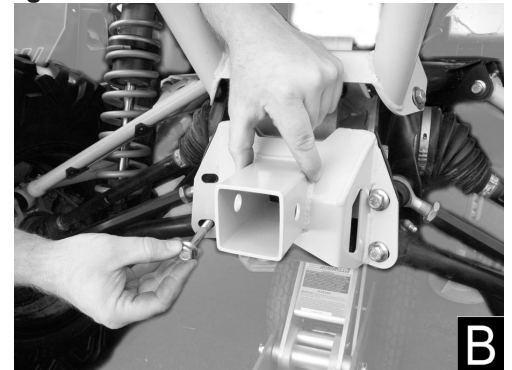

B